




# ASSEMBLY INSTRUCTION

## NP2XX-SILENT | 1/4" Professional Phone Plug

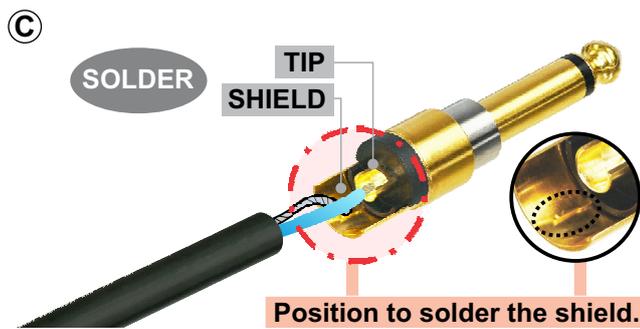

**A** Slide the boot onto the cable.

**B** Prepare cable as shown.

**C** Solder the wire ends.

**Attention:**

Solder shield to marked position.

**D** Position the chuck (1) onto the cable and align chuck with plugfinger (2).

**Attention:**

If using a cable with O.D. > 5.50 mm [0.216"] break away this part (3) of the chuck.

**E** Slide the housing onto the plugfinger with the chuck.

**F** Finish the installation by tighten the bushing onto the connector.



FINISHED PHONE PLUG



Draft. Nr.: BDA 699 V1  
Update: 2022-12-12

Neutrik AG | LI-9494 Schaan

[www.neutrik.com](http://www.neutrik.com)

Data subject to change without prior notice. © 2022 NEUTRIK®. NEUTRIK® are registered trademark of Neutrik AG. ALL RIGHTS RESERVED.

**NEUTRIK**  
A brand of the Neutrik Group